


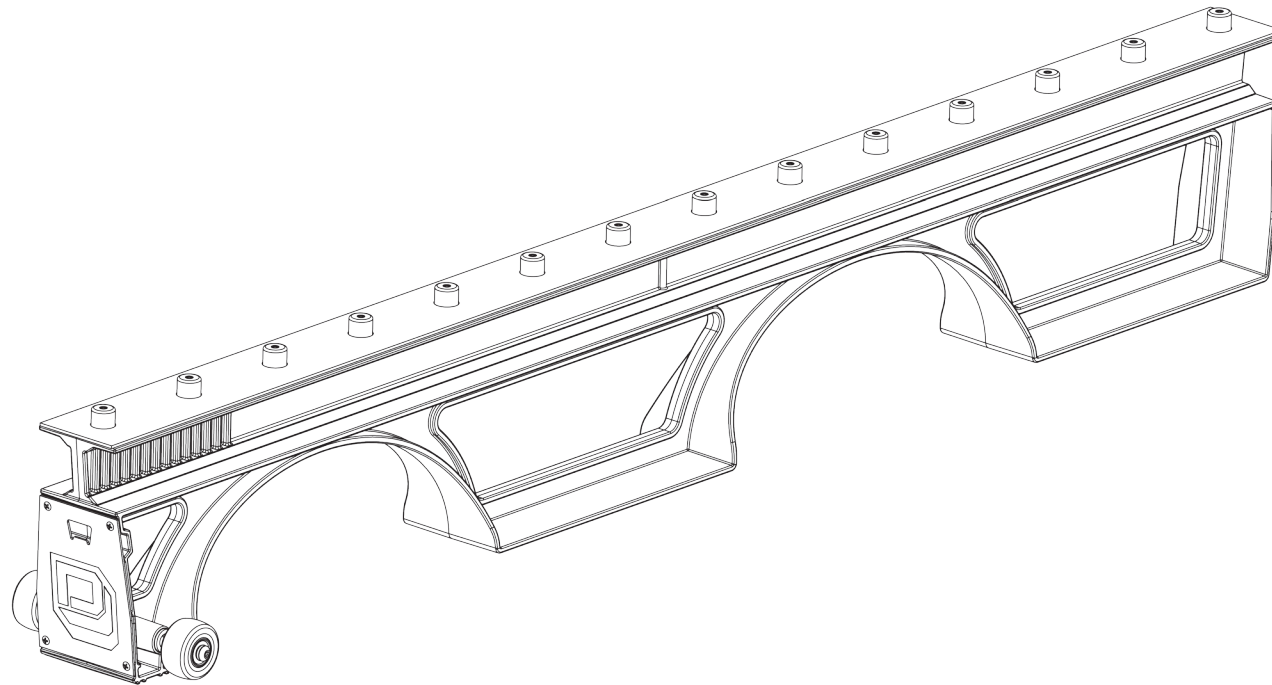

# Vert shim for GM trucks

GM truckbeds are oftentimes, but not always, convex

If your truckbed is convex, this Santoprene shim will allow the tailgate end of the vert to rest in full contact with the bed



The shim is 1/8" thick. If that thickness still doesn't fill the gap, cut the shim into two pieces to create more thickness

