




YOU'RE IN LUCK! WE'VE IMPROVED **STEP:6**

Propeller weld nuts have replaced nuts and washers. These are better and easier to install.

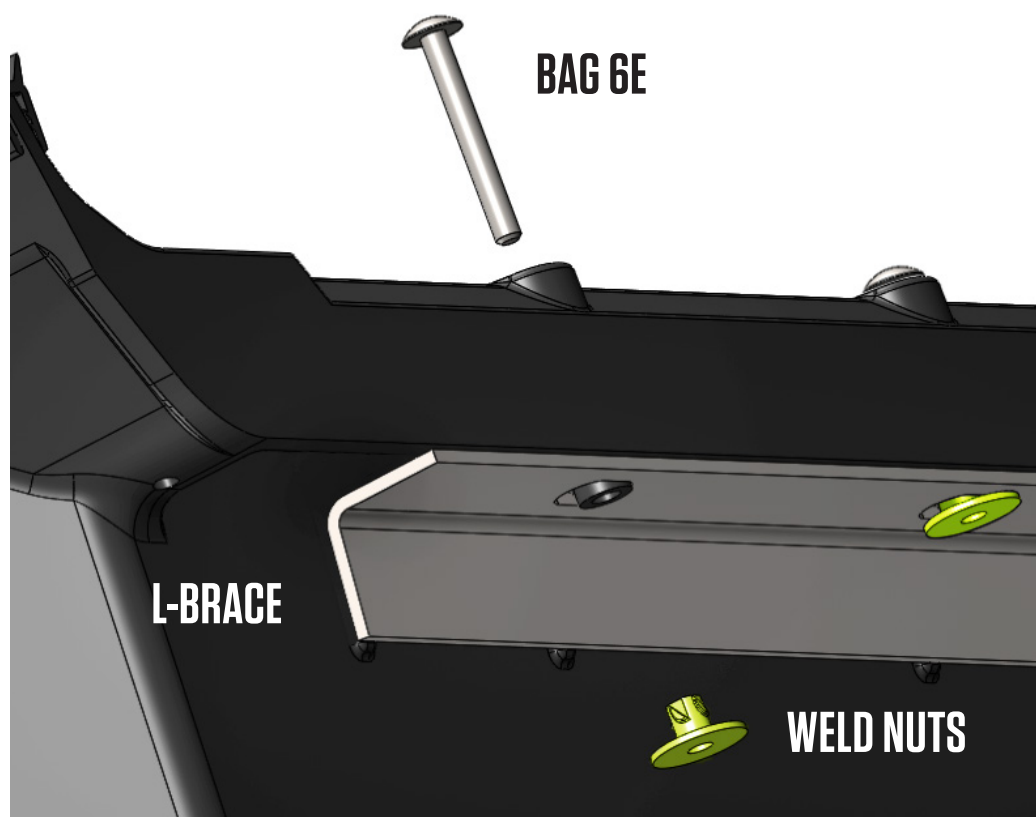

NEW L-BRACE INSTALL:

Align brace with the underside of drawer-side lip (see instructions). Simply use your thumb to push the weld nuts into each hole. Once weld nuts are in place, turn the drawer upright and insert the screws (snug but not too tight).

Repeat for all drawer sides; **BAG 6E** (4 times)

CONTACT US WITH ANY QUESTIONS:
SERVICE@DECKED.COM | 208.806.0251